

## **E-Z Treat UV**

### **Cleaning Your UV Light System**

**Caution: Do Not Run UV Lamps Dry, Fill UV Housing With Water/Effluent Before Turning On Power.**

It is recommended the quartz tubes, housing the UV Lamps, be cleaned at least every 12 months.

**Caution:** Always turn off the power to the UV system before any maintenance is performed. Use extreme care when handling the fragile UV lamp assembly.

**Step One:** Turn Off power to the UV System!

**Step Two:** Unscrew the fitting holding the UV Lamp and Quartz Sleeve.

**Step Three:** Lift the UV Lamp assembly upward until it is clear of the UV System housing.

**Step Four:** Using a clean, damp sponge or clean soft cloth, wipe all residue from the quartz tube. Clean stubborn dirty areas with a liquid glass cleaning product.

**Caution:** Do Not Scrape or Use Scouring Pads, this may scratch the quartz tube and alter the performance of the UV system.

**Step Five:** Visually inspect each quartz tube for cracks or breaks; replace the UV Lamp assemblies if they are cracked, scratched or broken.

**Step Six:** Re-Insert the UV Lamp assembly into the UV housing and tighten the fitting that holds the UV Lamp and Quartz Sleeve. **Use Caution (Finger Tight Only)** Do Not use pliers, wrenches, etc. to perform this maintenance.

**Step Seven:** Turn On Power to the UV System.